
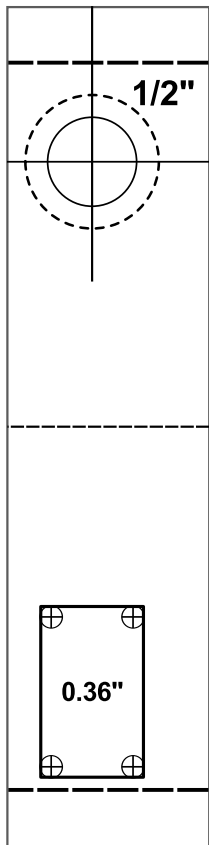


**WARNING: Measure this before drill, it should be 1" scale.**

**Right-Handed**

**Wrong-Handed**

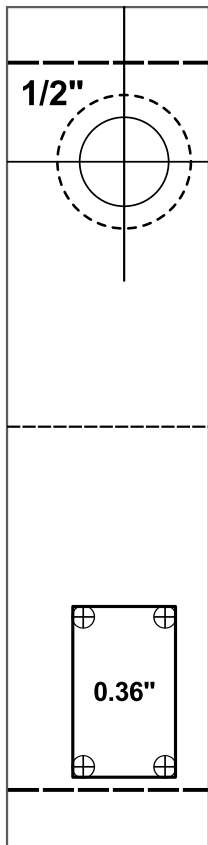

**Lid Side**




**Hammond  
1590b**

**1"**

**Cut outside of black lines, they are included in the dimensions. Align dashed lines with screw posts on inside of box. Holes are drilled off-center to account for the thickness of the lid.**

**[/r/PVPartKits](#)**

**[/u/advicevice](#)**

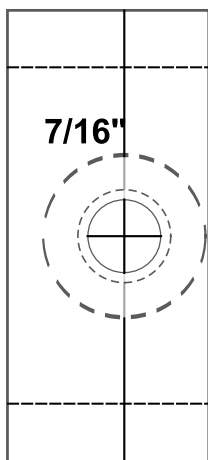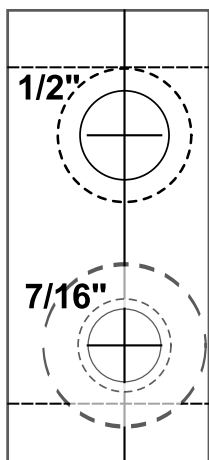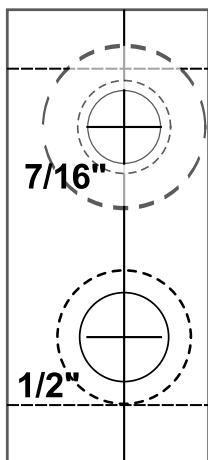

**Lid Side**

**Lid Side**

**Lid Side**

**Far side**

**Near side**

**Center**

**7/16" = FDV 510**

**1/2" = 93PR200LF POT**

**Three positions for the 510 connector. Mounting the 510 and button on the same side of the box can be a tight fit.**